



## TempTRIP Wireless BT Humidity Logger

TempTRIP Humidity loggers are similar to the TempTRIP temperature logger: they record relative ambient humidity (RH) every 10 minutes and store the results on the logger. The values are expressed as a percentage from 0% to 100% RH.

When in the vicinity of a TempTRIP Edge reader, Gateway reader or phone app, the loggers are read automatically, and the data is sent to the TempTRIP website where authorized users can see the history and the graph of the RH values over time.

Humidity loggers are specified for **indoor use**, either placed on a shelf or attached to a wall. Keep the white “HUMIDITY” label facing up when laying the logger flat on a shelf and leave enough space around the logger to provide air flow (Figure 1.). Alternatively, the logger can be placed standing on its end; again, **leave enough space around the logger to provide air flow** (Figure 2.).

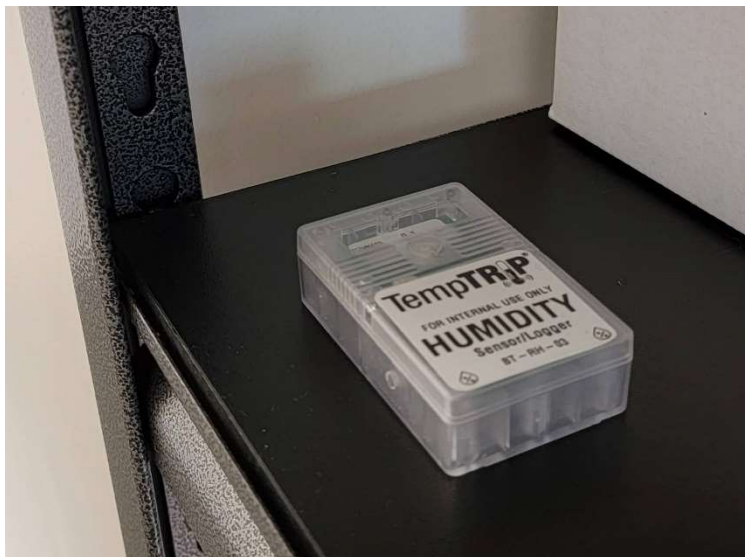


Figure 1.



Figure 2.